

Active Monopole Antenna Series Operation Manual

TABLE OF CONTENTS

WARRANTY	3
INTRODUCTION	4
SPECIFICATIONS	6
OPERATING INSTRUCTIONS	8
ANTENNA FORMULAS	10
PREAMPLIFIER ALIGNMENT	11
CALIBRATION	12
MAINTENANCE	13

WARRANTY INFORMATION

A.H. Systems Inc., warrants that our Antennas, Sensors and Probes will be free from defects in materials and workmanship for a period of three (3) years. All other products delivered under contract will be warranted for a period of two (2) years. A.H. Systems' obligation under this warranty shall be limited to repairing or replacing, F.O.B. Chatsworth, California, each part of the product which is defective, provided that the buyer gives A.H. Systems notice of such defect within the warranty period commencing with the delivery of the product by A.H. Systems.


The remedy set forth herein shall be the only remedy available to the buyer, and in no event shall A.H. Systems be liable for direct, indirect, incidental or consequential damages.

This warranty shall not apply to any part of the product which, without fault of A.H. Systems has been subject to alteration, failure caused by a part not supplied by A.H. Systems, accident, fire or other casualty, negligence, misuse or normal wear of materials.

Except for the warranty set forth above, there are no other warranties, expressed or implied, with respect to the condition of the product or its suitability for the use intended for them by the buyer.

For prompt service, please contact our service department for a Return Material Authorization Number before shipping equipment back to us.

INTRODUCTION

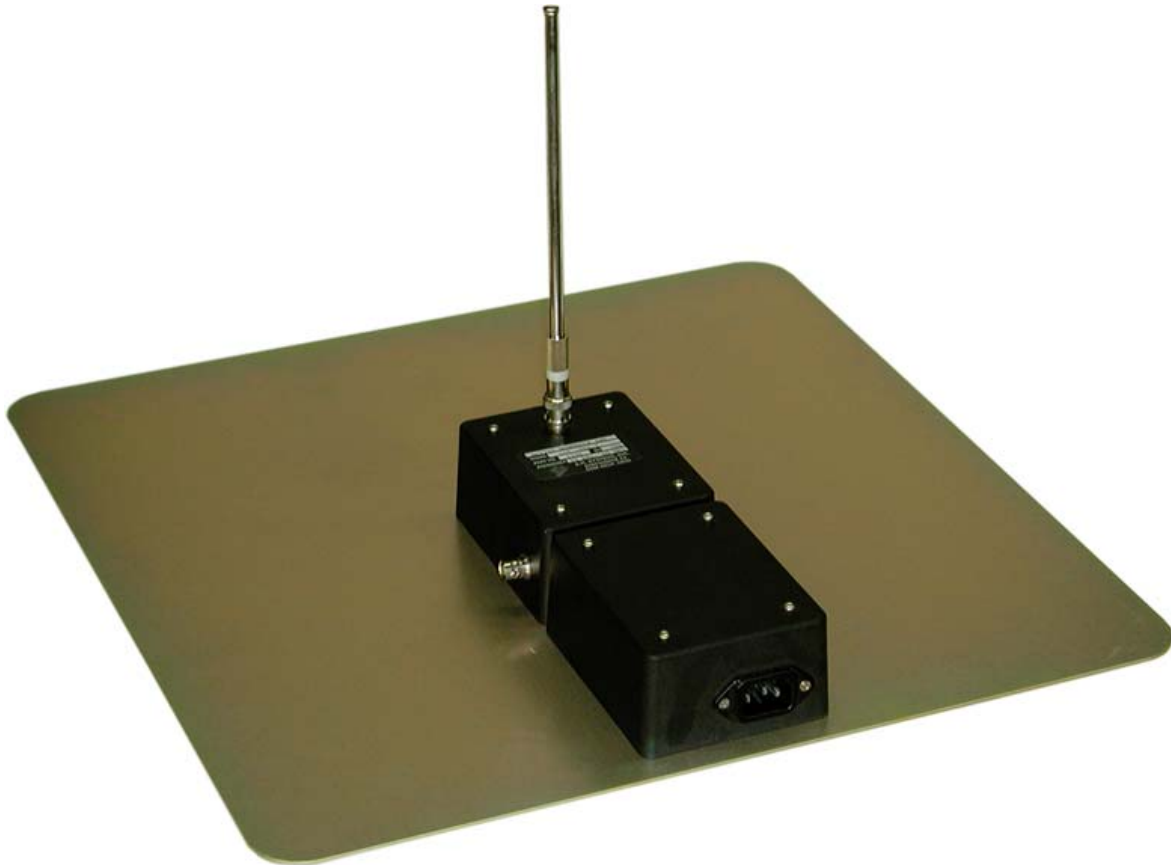

Model	Model Number	Part Number	Description
SAS-550-1B	9KHz – 60 MHz	2380	Active Monopole Antenna, Battery Powered
SAS-550-2B	100Hz – 60 MHz	2381	Active Monopole Antenna, Battery Powered

INTENDED PURPOSES

This equipment is intended for general laboratory use in a wide variety of industrial and scientific applications, and designed to be used in the process of generating, controlling and measuring high levels of electromagnetic Radio Frequency (RF) energy. It is the responsibility of the user to assure that the device is operated in a location which will control the radiated energy such that it will not cause injury and will not violate regulatory levels of electromagnetic interference.

RANGE OF ENVIRONMENTAL CONDITIONS

This equipment is designed to be safe under the following environmental conditions:

Indoor use

Altitude up to 2000M

Temperature of 5°C to 40°C

Maximum relative humidity 80 % for temperatures up to 31°C.

Decreasing linearly to 50% at 40°C

Pollution degree 2: Normally non-conductive with occasional condensation.

While the equipment will not cause hazardous condition over this environmental range, performance may vary.

SPECIFICATIONS

GENERAL DESCRIPTION

The A.H. Systems Active Monopole Antennas are an active, general-purpose, receive-only antenna that covers 100 Hz – 60 MHz frequency range. It is ideal for instantaneous bandwidth scanning (without tuning) of electric fields in its frequency range and can drive any receiver with 50Ω input impedance. The unit comes with a telescoping rod, ground plane with a high impedance matched preamplifier and battery charger or Power Cord. Review this manual and become familiar with all safety markings and instructions. Verify that the equipment impedance is compatible with the receiver impedance.

ANTENNA SPECIFICATIONS

The SAS-550-1B Active Monopole Antenna specifications:

Frequency Range	9 KHz - 60 MHz
Antenna Factor (dB/m)	0.1
Flatness	+/- 0.5 dB from 20KHz to 30 MHz
.....	+/- 5dB whole range
Sensitivity.....	5 dBuV/M @ 10 KHz
.....	-20 dBuV/M @ 1 MHz
Dynamic Range	96 dB @ 10 KHz
.....	122 dB @ 1 MHz
Saturation.....	
Output Connector Type	BNC(f)
Input Power.....	12VDC Battery
Weight.....	4.7lbs / 2.1kg
Size (W x H x D)	18" x 18" x 41"
.....	46cm x 46cm x 104cm

The SAS-550-2B Active Monopole Antenna specifications:

Frequency Range	100 Hz - 60 MHz
Antenna Factor (dB/m)	0.1
Flatness	+/- 0.5 dB from 2KHz to 30 MHz
.....	+/- 24dB whole range
Sensitivity.....	5 dBuV/M @ 10 KHz
.....	-20 dBuV/M @ 1 MHz
Dynamic Range	96 dB @ 10 KHz
.....	122 dB @ 1 MHz
Saturation.....	
Output Connector Type	BNC(f)
Input Power.....	12VDC Battery
Weight.....	4.7lbs / 2.1kg
Size (W x H x D)	18" x 18" x 41"
.....	46cm x 46cm x 104cm

OPERATING INSTRUCTIONS

ASSEMBLY INSTRUCTIONS

To prepare the antenna for operation, attach the telescoping rod antenna element to the top of the high impedance preamplifier. Connect the rod antenna by pushing straight down on the female connector on top of the amplifier. Do not apply excessive sideways force, as this can cause the antenna center-pin to break. Do not operate the Monopole antenna with the Battery charger connected.

SETUP INSTRUCTIONS

The amplifier and ground plane can be mounted to any tripod with a 1/4-20 attaching stud. Attach the rod antenna to the connector on the top of the amplifier. Extend the rod antenna to 41" (104cm) above the ground plane. Connect the output BNC connector on the side of the amplifier to the input of a 50-ohm receiver or spectrum analyzer. Make ground connection to ground plane if required by the test specification.

NOTE: The on/off toggle switch is a locking type to prevent accidental turn-on or turn-off. Pull out on the toggle handle and push up to turn amplifier power on. Pull out and push down to turn off.

The POWER indicator LED will light and stay lit as long as the battery has sufficient voltage to power the preamplifier. If the LED does not light, do not use the preamplifier until the battery has been recharged.

GENERAL USE INSTRUCTIONS

The calibration tables provide a listing of the frequency of operation and it's antenna factor in dB/m. The field strength is the receiver voltage in dBuV plus the antenna factor (refer to the antenna factor calibration) plus any cable loss. When making a measurement, mount the antenna on an appropriate mast or tripod. Ensure that the Monopole is turned on and use the appropriate The Active Monopole Antenna is easy to set up and provides good reception with a minimal need for space. It's flat 0dB Antenna Factor makes it a convent choice when calculating the field intensity. The signal field strength is the receiver voltage in dBuV plus the antenna factor (refer to the antenna factor calibration) plus any cable loss.

CHARGING THE BATTERY

Depending on the model (if applicable) position the input voltage selector located next to the wall plug on the back of charger to the proper voltage (either 110-120 VAC 60 Hz or 220-240 VAC 50 Hz). Be sure to check available voltage and adjust selector as needed before use. The amplifier ON-OFF switch must be in the OFF/CHARGE position to charge the battery. One hour of amplifier operation will be obtained for each hour of charge up to a maximum of 8 hours operation. Charging for up to 24 hours will not damage the battery. Using the battery charger to operate the amplifier directly is not recommended.

ECF-10 (Equivalent Capacitance Fixture)

The ECF-10 is an equivalent capacitance fixture constructed per IEEE 291 and ARP 958. This is an indispensable tool used for gain adjustment and calibration of the active monopoles. The ECF-10 is used as a signal substitution source when calibrating the active monopole. Refer to the alignment and calibration procedures below.

ANTENNA FORMULAS AND CALCULATIONS

A specific antenna factor is associated with each frequency. This number is to be added to the receiver reading (in dBuV) in order to convert to field intensity in dBuV/Meter.

EXAMPLE:

Assume the transmitter to be measured is operating at 1 MHz and the receiver reading indicates 44.0 dBuV

AF (dB/m) = 0.1

Receiver reading (dBuV) = 44 dBuV

Cable loss (dB) = 0.7

Field Intensity = AF + receiver reading + cable loss

Field Intensity = 0.1 + 44.0 + 0.7

Field Intensity = 44.8 dBuV/Meter

CALIBRATION

Preamplifier Alignment

Preliminary alignment is required on all manufactured active monopoles prior to placing the units in stock for sale. All preliminary test sheets and ITP will be maintained and a copy stored with the unit to be placed in stock.

Turn on the equipment and allow 15 minutes for warm up.

Set up the equipment to 50 MHz center frequency, 10 MHz Span/DIV, 2 dB/DIV amplitude, 300 KHz resolution and 80 dB μ V reference amplitude on the spectrum analyzer.

Set the output level on the tracking generator to 72 dB μ V

Connect the tracking generator to the spectrum analyzer as shown in Figure 3 and the 50 Ω load connected to the antenna signal output port (B).

Save trace as trace A.

Connect the tracking generator cable to the fixture terminated with 50 Ω (A) and connect the spectrum analyzer cable to the signal output port (B) per Figure 3.

Adjust the resistor pots (R₆, R₇ and R₈ Figure 1) to match the following curve (Figure 2).

R₆ adjusts high-frequency gain

R₇ adjusts low-frequency gain

R₈ adjusts overall gain

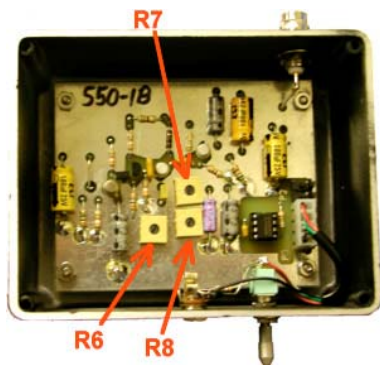


Figure 1

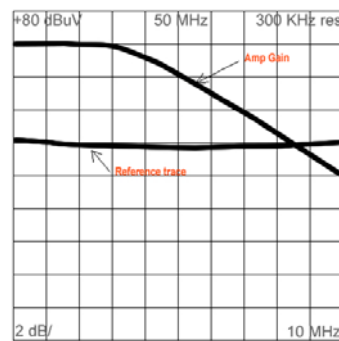


Figure 2

Verify that the low frequency cut off is below specification.

Records providing evidence that the required final inspection and tests are carried out shall be maintained and shall be available for review by Customer and third party inspectors. Such records include signed off ITPs, Job cards, Nonconformance reports, Testing reports and Inspection reports if any.

Measurement System Checks

MIL-STD 461E changed from the previous versions with the addition of making a pre-test calibration (measurement system checks) as part of the test procedure. When testing to the previous standards, one could go through an entire test suite with a faulty cable and never know it. This cable could adversely affect the results for one or many tests, depending on how often it was used.

The 10 pF capacitor (ECF-10) used with the rod antenna in the measurement system check simulates the capacitance of the rod element to the outside world. With the rod antenna, the electric field present induces a voltage in the rod that is applied to the preamplifier circuitry. One of the functions of the preamplifier is to convert the high impedance input of the antenna element to the 50 ohm impedance of the measurement receiver. The 10 pF capacitor ensures that the correct source impedance is present during the check.

For measurement system checks, establishing the correct voltage at the input to the 10 pF capacitor can be confusing. Since, the electrical length of the 104 cm rod is 0.5 meters, the conversion factor for the induced voltage at the input to the 10 pF capacitor is 6 dB/m.

If the limit at the measurement system check frequency is 34 dBuV/m, the required field level to use for measurement system check is 6 dB less than this value or 28 dBuV/m. The voltage level that must be injected is:

$$28 \text{ dBuV/m} - 6 \text{ dB/m} = 22 \text{ dBuV}$$

Since the input impedance at the 10 pF capacitor is very high, a signal source must be loaded with 50 ohms (termination load or measurement receiver) to ensure that the correct voltage is applied. A “tee” connection can be used with the signal source connected to the first leg, the 50 ohm load connected to the second leg, and the center conductor of the third leg connected to the 10 pF capacitor.

Active Monopole Calibration

The antenna factor for the rod antenna shall be determined by measuring the signal transfer characteristics of the matching device and assuming that the antenna is a short monopole with an infinite ground plane. Set up the monopole to be calibrated and the test equipment per Figure 3. Allow all equipment to warm up for 15 minutes.

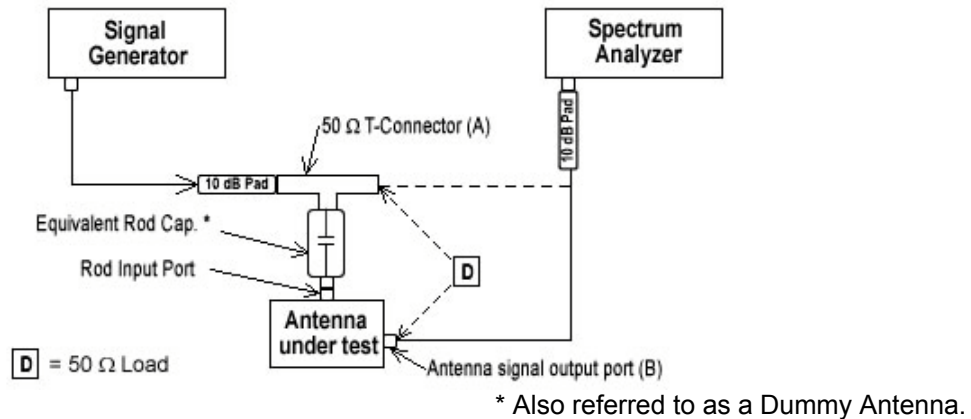


Figure 3

NOTES

If VSWR of receiver or signal generator is low, pads may not be needed or reduced to 6dB or 3dB.

With the equipment connected as shown and a 50Ω termination on the T-connector (A), measure the received signal voltage V_L in dBμV at the signal output port (B).

Leaving the RF output of the signal generator unchanged, transfer the 50Ω termination to the signal output port (B) and transfer the receiver input cable to the T-connector (A). Measure the drive signal voltage V_D in dBμV.

Subtract V_L from V_D and add 6 dB to obtain the antenna factor (in dB) of the antenna.

Records providing evidence that the required final inspection and tests are carried out shall be maintained and shall be available for review by Customer and third party inspectors. Such records include signed off ITPs, Job cards, Nonconformance reports, Testing reports and Inspection reports if any.

NOTE – The signal generator does not need to be calibrated, but it shall be stable. The 50Ω termination shall have low VSWR. The spectrum analyzer shall be calibrated and have low VSWR

MAINTENANCE

To ensure reliable and repeatable long-term performance, annual re-calibration of your pre-amplifier by A.H. Systems experienced technicians is recommended. Our staff can recalibrate almost any type or brand of antenna.

For more information about our calibration services or to place an order for antenna calibration visit our website at <http://www.AHSystems.com> or call 1(818) 998-0223.